


Floor Plan

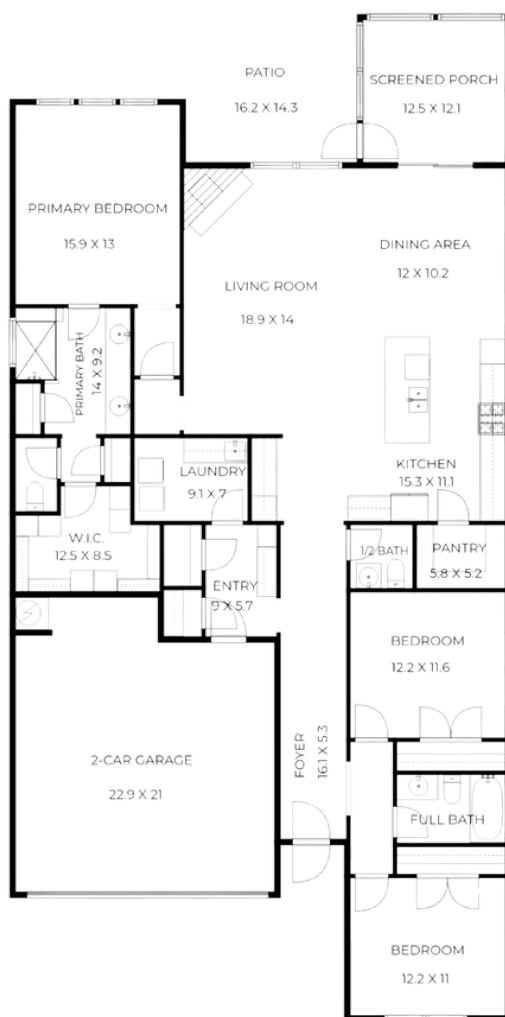

1340 Monterey Bay Dr.
Wake Forest, NC 27578



Listing with Sommer Donahoe

REALTOR® | Broker

919-426-1762

✉ sommer@sommerdrealty.com



SOUTHERNLUXLIVING.COM