

COMP MOUNT

One-Piece Flashing with Elevated Cone

No press-fits or deck-level
EPDM washers to fail

Encapsulating Design

Raises the water seal
0.9" Above roof deck



Simple 3-Piece Design Watertight For Life

Pegasus solar's comp mounts are a cost effective, high-quality option for rail installations on composition shingle roofs. Designed to last decades, the one-piece flashing with elevated cone means there is simply nothing to fail.



25-Year Warranty

Manufactured with advanced materials and coatings to outlast the roof itself



Code Compliant

Fully IBC/CBC Code Compliant
Exceeds ASCE 7-16 Standards



Superior Waterproofing

Tested to AC286 without sealant
Water seal elevated 0.9" above




All-In-One Kit Packaging


Flashings, L-Feet and SS lags with bonded EPDM washers are included in each 24-pack

1


Drill pilot hole in the center of the rafter.

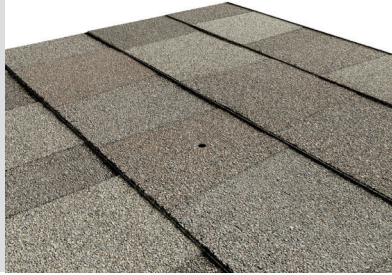
2







Optional: Apply a "u-shape" of sealant to the underside of the flashing and position under 2nd shingle course, cone over pilot hole.

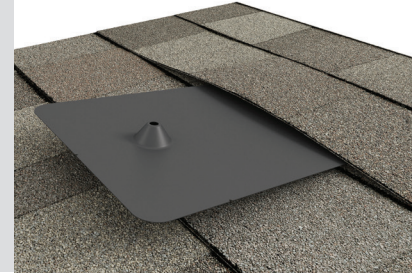
3

Place L-Foot over cone and install lag with washer through L-Foot.

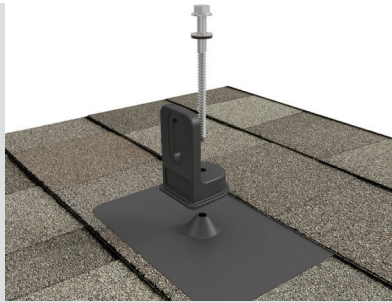
4

Drive lag to required depth. Attach rail per rail manufacturer's instructions.

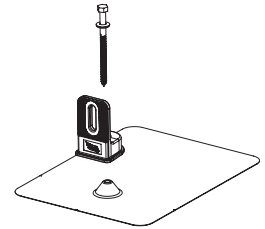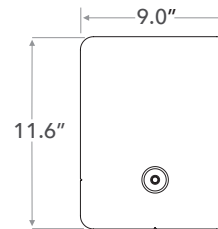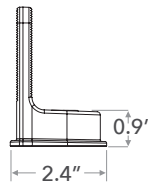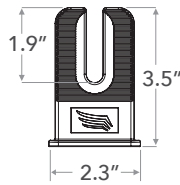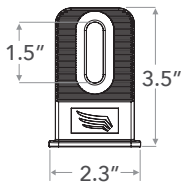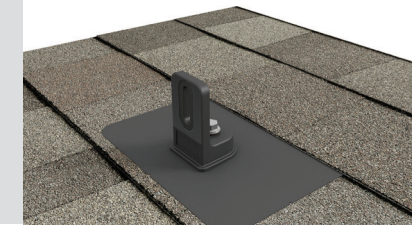

SPECIFICATIONS	COMP MOUNT INSTALL KITS				
SKU	PSCR-CBB0	PSCR-UBB0	SPCR-CBBH	PSCR-CMM0	PSCR-UMM0
Finish	Black L-Foot And Black Flashing			Mill	
L-Foot Type	Closed Slot	Open Slot	Closed Slot	Closed Slot	Open Slot
Kit Contents	L-Foot, Flashing, 5/16" x 4 1/2" SS Lag with metalized EPDM washer	L-Foot, Flashing, 5/16" x 4 1/2" SS Lag with metalized EPDM washer and M10 Hex Bolt	L-Foot, Flashing, 5/16" x 4 1/2" SS Lag with metalized EPDM washer	L-Foot, Flashing, 5/16" x 4 1/2" SS Lag with metalized EPDM washer	L-Foot, Flashing, 5/16" x 4 1/2" SS Lag with metalized EPDM washer
Roof Type	Composition Shingle				
Certifications	IBC, ASCE/SEI 7-16, AC286				
Install Application	Railed Systems				
Compatible Rail	Most				
Kit Quantity	24				
Boxes per Pallet	72				

Protected under US Patent: 10,998,847. Additional patents pending. All rights reserved. ©2021 Pegasus



Pegasus Rail System Installation Manual

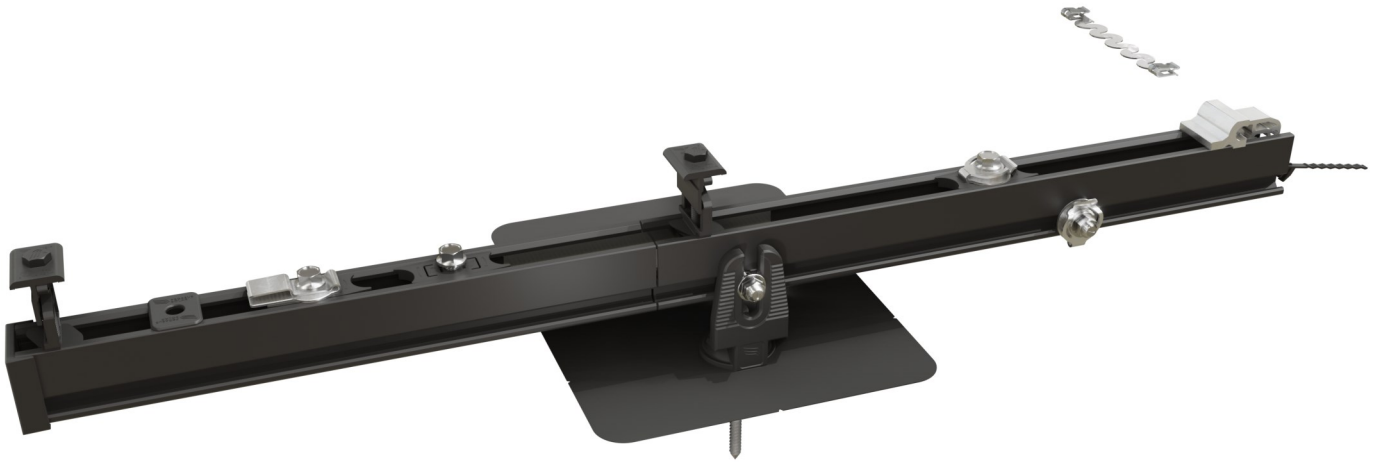


Table of Contents

Overview.....	3
Disclaimer	4
Certifications and Code Compliances/ Product Identification	5
Required Tools.....	6
Rail Components and Install Torques	7
Mounts and Attachments.....	8
Mounts and Attachments.....	9
Installation Process	
T-Bolt / Splice installation / Leveling the Rail.....	10
MLPE Mount / Wire Management / Ground Lug	11
Multi-Clamp / Hidden End Clamp	12
PV Modules	13
Optional: Skip Rail and alternative Ground Lug	14
N-S Bonding Jumper / End Cap / Tilt Legs.....	15
Ground Path with N-S Bonding Jumper and Ground Lug	16
Ground Path with Ground Lugs only	17
Blank Page	18
Ground Path with MLPE Integrated Grounding.....	19
Appendix A - Approved PV Module List.....	20
Appendix B.....	21
Span Tables	21
Warranty.....	21
External links.....	21



Overview



The Pegasus Rail System is engineered to mechanically attach solar PV modules to residential and commercial sloped roofs. The system may be used to ground and bond solar PV modules complying with UL 2703 when the specific module has been evaluated for grounding and/or bonding in compliance with this manual. A list of evaluated modules is located in Appendix A. The installed mounting system and solar PV array should be inspected periodically for loose components, debris build-up (such as under the PV modules), and any corrosion. Any loose components, excessive debris, or corrosion should be remedied immediately by a licensed contractor.



Disclaimer

This manual describes proper installation procedures and provides necessary standards required for product reliability. All installers must thoroughly read this manual and have a clear understanding of the installation procedures prior to installation. Failure to follow these guidelines may result in solar array damage, property damage, bodily injury or even death. Warranty details are available at www.pegasussolar.com

THE INSTALLER IS RESPONSIBLE FOR:

- Ensuring all electrical components are installed by a licensed and bonded electrician or solar contractor
- Ensuring all work complies with national, state and local installation laws and codes, and all work complies with all applicable local or national building and fire codes, including any that may supersede this document
- Ensuring all information provided about the jobsite was accurately used in determining the compatibility of the system and the rail and mount spans
- Ensuring all components are installed in accordance to this installation manual, and the spacing and use of mounts and rails are in compliance with Pegasus engineering span tables for the specific attributes of the solar array (e.g. wind load, building exposure, etc.)
- Using only Pegasus Solar components - substituting any components will void the Warranty unless explicated stated by Pegasus in writing
- Providing an appropriate method of direct-to-earth grounding according to the latest edition of the National Electrical Code, including NEC 250: Grounding and Bonding, and NEC 690: Solar Photovoltaic Systems
- Ensuring bare copper grounding wire does not contact aluminum components
- Ensuring PV modules and module-level power electronics are installed in compliance with the respective manufacturers' installation manual and warranty terms and conditions
- Not breaking the bonding path of the array during periodic maintenance
- Upon maintenance of a Pegasus installed system, checking for loose components, excessive debris, and corrosion. The installer shall re-tighten any loose components immediately; remove any excess debris immediately, and replace any corroded components immediately.
- Ensuring all AC power is disconnected before servicing PV modules, wiring, and any module-level power electronics



Certifications / Code Compliances / Product Identification

Certifications and Code Compliance

BONDING AND GROUNDING

- Conforms to UL 2703, Ed. 1 Standard for Safety First Edition: Mounting Systems, Mounting Devices, Clamping/ Retention Devices, and Ground Lugs for Use with Flat-Plate Photovoltaic Modules and Panels.
- Certified to LTR AE-001-2012 Photovoltaic Module Racking Systems.
- Max Overcurrent Protective Device (OCPD) Rating: 25A
- Max Module Size: 24ft²; Max Frameless Module Size for Canadian LTR-AE: 19.5 ft²
- Module Orientation: Portrait or Landscape
- System Level Allowable Design Load Rating: see PE stamped certification letters defining the actual system structural capacity (see Appendix B).
- Ground Lug conforms to UL 467

CLASS A SYSTEM FIRE RATING PER UL2703 & UL1703

- Any roof slope with Module Types 1 and 2; any module-to-roof gap; no deflectors required
- This rating is applicable with any third-party attachment
- Class A rated PV systems can be installed on Class A, B, and C roofs without affecting the roof fire rating

STRUCTURAL CERTIFICATION

- Designed and Certified for Compliance with the International Building Code, ASCE 7-10 & ASCE 7-16
- For Dual Rail installations, up to 2 PV modules per pair of 7' of rails are allowed.
- See PE Certified Span Tables in Appendix B for load ratings and details


WATER SEAL RATINGS: AC286

- Comp Mount has been tested and evaluated without sealant for roof slopes between 2:12 and 12:12

Product Identification

Product identification can be made by looking at the top of the Multi-Clamp:

- Pegasus Logo above bolt head
- Model Name: "PRS"
- Lot Code: e.g. "A20-4"
- UL 2703 listing: CSA Mark

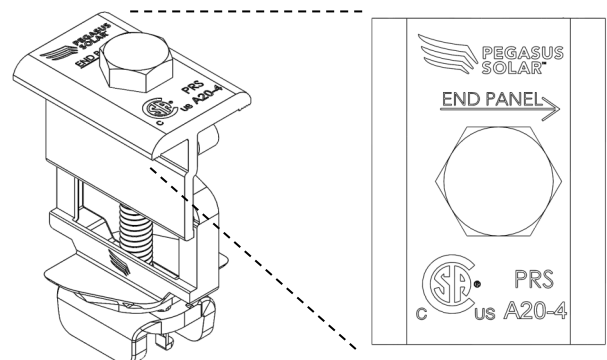

Required Tools



ROOFING CHALK



STRING LINE



MEASURING TAPE



1/2" DEEP SOCKET



TORQUE WRENCH



DRILL DRIVER



DRILL






JOBBER BIT



Components and Installation Torque Requirements

Rails and Splices

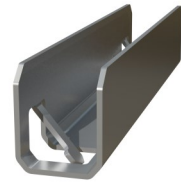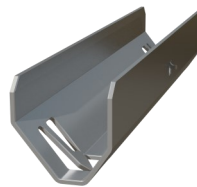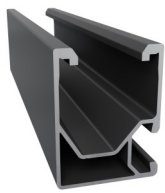



Pegasus Rail	Pegasus Max Rail	Splice	Max Splice
6' Spans up to 110 mph*	6' Spans up to 130 mph*	Structural, Non-interfering	Structural, Non-interfering
4' Spans up to 130 mph*	4' Spans up to 170 mph*	No Tools	No Tools
UL2703 Listed	UL2703 Listed	UL2703 Listed	UL2703 Listed

* Not for design use. See Appendix B - Span Tables for details.

Rail Components



Multi-Clamp	Hidden End Clamp	MLPE Mount	Dovetail T-Bolt
Mid and End Clamp 30-40mm PV modules	Any PV module with frame flange	Compatible with most MLPE devices	For use with any mount or attachment
UL2703 Listed	UL2703 Listed	UL2703 Listed	UL2703 Listed
1/2" Socket Torque Value 100 in-lbs.	1/2" Socket Torque Value 135 in-lbs.	1/2" Socket Torque Value 135 in-lbs.	1/2" Socket Torque Value 300 in-lbs.

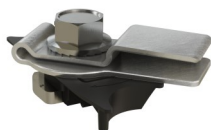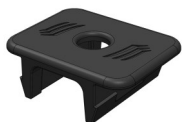

Wire Clip	Cable Grip	Ground Lug	N-S Bonding Jumper	End Cap & Max End Cap
Holds wires in Rail	Holds two trunk cables	6 & 8 AWG Copper Wire	Bonds adjacent PV modules	5 GPM drainage rate
UV stable and fire resistant	Holds four PV wires	UL2703 Listed	UL2703 Listed	UV stable and fire resistant
No tools	1/2" Socket Torque Value 135 in-lbs.	1/2" Socket Torque Value 135 in-lbs.	No tools	No tools



Components and Installation Torque Requirements (Cont.)

Intentionally Left Blank

Mount Attachments




Pegasus L-foot
Included in Pegasus Comp Mount and Tile Replace Mount
Use with Dovetail T-bolt



Compatible Mounts

Comp Mounts - Open and Closed Slot, Black and Mill

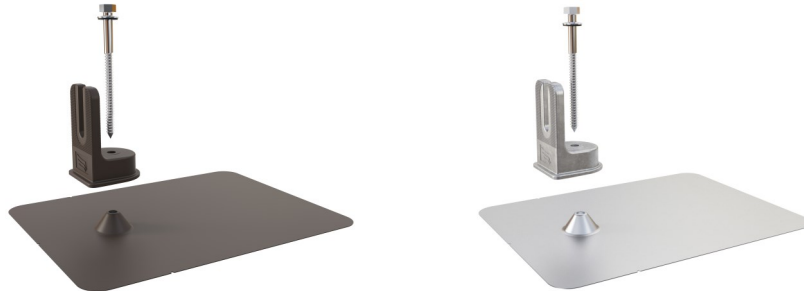

Comp Mount

For use on sloped asphalt or composite shingle roofs.
For installation instructions and training videos please visit
www.pegasussolar.com

Tile Replace Mounts - Flat, S, and W Tile Roof Profiles



Tile Replace Mount

For use on sloped concrete and clay tile roofs.
For installation instructions and training videos please visit
www.pegasussolar.com


Third-Party Mounts and Attachments

When using a third party attachment or mount, refer to the manufacturer's installation manual. In all cases, the Dovetail T-bolt is required to attach the Rails to any third party attachment or mount. It is the installers responsibility to compare the load rating and span tables of the Pegasus Rail to the third party attachment ratings, and use the lesser of the two ratings when designing the system. For all third party mounts and attachments, when the Dovetail T-bolt and nut are installed and tightened to the attachment, the Dovetail T-bolt must be flush or extend past the last thread on the nut.



Installation Process

Rail and T-Bolt Installation

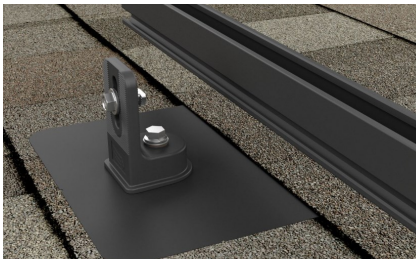

Place Dovetail T-Bolt in the slot of the L-Foot or other attachment. The Dovetail T-bolt is the only approved attachment bolt for the Rails for any mount or attachment.



- Insert the T-bolt into the rail slot and hand tighten
- Rail end must extend beyond attachment face for when using a splice



- Install additional rows of Rails spaced per PV module manufacturer's requirements
- Level Rail rows using a stringline
- Tighten the Dovetail T-bolt to 300 in-lbs. with a 1/2" socket

Splice Installation



Splice can be installed anywhere in a span, but must be used between two mounts (not in a cantilevered section of rail)



Insert the Splice into the first Rail up to the bump-stop (halfway). Push a second Rail on to the Splice up to the bump-stop.

Rail Cantilever



For cantilevered ends of rail:


- Min. cantilever: 4.5in
- Max. cantilever: 24in

Thermal Break



- Leave a 1" thermal break every 36ft of continuous Rails sections
- Thermal break must be offset 1" or more from attachment

Wire Management

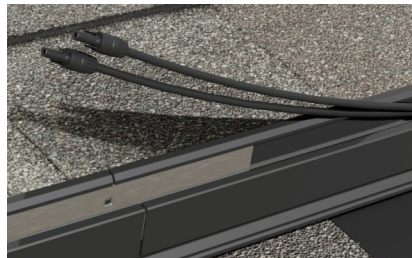

PV wires and MLPE trunk cables can be placed into the channel of the rail




The flanges of the Multi-Clamp will protect wires from the bolt after tightening*

*Partially protect for frames $\leq 31\text{mm}$



Installation Process

MLPE Mount Installation

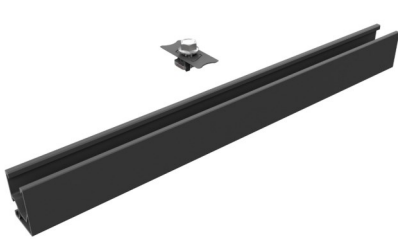

Position the MLPE Mount perpendicular to the rail opening, place on rail, and turn clockwise 90 degrees




Install the MLPE device to the MLPE Mount and tighten the bolt with a 1/2" socket to 135 in-lbs.




Route wires before or after installing the MLPE

Cable Grip

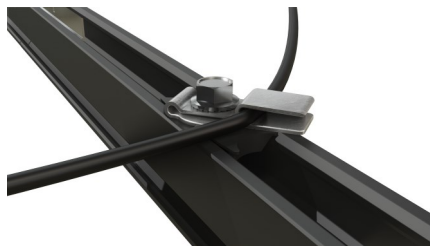

Like the MLPE Mount, twist-lock the Cable Grip into the open channel of the Rail

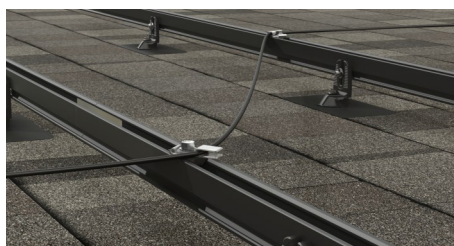

Cable Grip can be used to secure up to two trunk cables or four PV wires, and firmly secures and holds -runs and

Wire Clip




Press firmly on top of Wire Clip lock into Rail. Use a screwdriver or similar tool through the hole to pry-out the Wire Clip if necessary.

Ground Lug Installation



The Ground Lug comes pre-installed on a MLPE Mount. Determine best position for ground wire (e.g. near J-box); install the Ground Lug onto Rail.

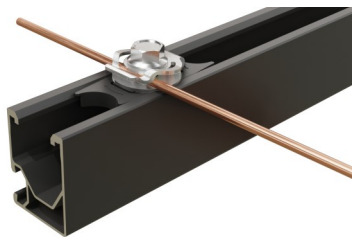

Run a 8 or 6 gauge copper ground wire from each Ground Lug to the J-box for connection to earth ground; tighten with a 1/2" socket to 135 in-lbs.



Alternatively, remove the Ground Lug from the MLPE Mount and use a Dovetail T-bolt to attach the it to the Rail; tighten with a 1/2" socket to 250 in-lbs



Installation Process

Multi-Clamp Installation



Align the Multi-Clamp parallel with the rail, then insert into the rail channel




Push down and turn the Multi-Clamp clockwise 90 degrees



Multi-Clamp will click when it is engaged. Slide the Multi-Clamp up snug to the PV module frame




Multi-Clamp as **mid-clamp**
Any orientation acceptable

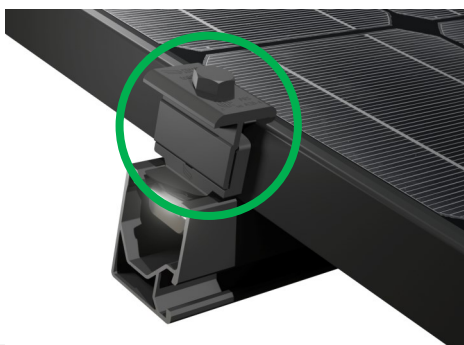

Multi-Clamp as **end-clamp**
Correct orientation

- Silver Bond Plate is hidden
- Arrow points to end panel

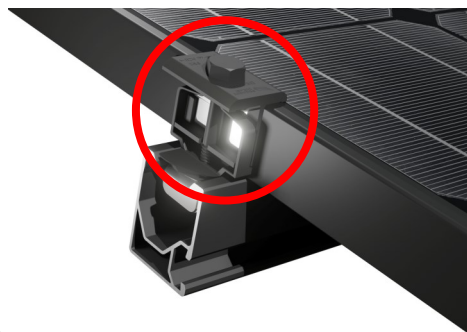

Multi-Clamp as **end clamp**
Incorrect orientation

- Silver Bond Plate is visible
- Arrow points away from end panel

Hidden End Clamp Installation *(optional)*



After cutting the Rail to align with the edge of the to-be place PV module; slide the HEC into to the Rail opening, then place the PV module into position



Pull the tab until the HEC is fully engaged with the PV module frame, then hook the nearest Pull-tab tooth onto the edge of the Rail



Tighten the HEC bolt with a 1/2" socket to 135 in-lbs. Then unhook the pull-tab and fold it into the Rail opening.



Installation Process

Setting PV Modules




Place the first PV module at the beginning of the row of Rails




Install Multi-Clamp in Rail and slide flush against PV module. Tighten clamp with 1/2" socket to 100 in-lbs. Ensure Multi-Clamp is in the "End Clamp" orientation (*see Multi-Clamp Installation*).





Install Multi-Clamp into Rail on the opposite side of the PV module. Place next PV module on rail and snug against Multi-Clamp, then tighten Multi-Clamp with 1/2" socket to 100 in-lbs.

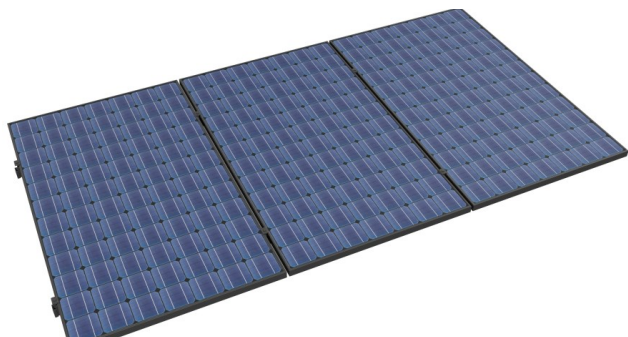

Repeat the previous steps until the row is finished

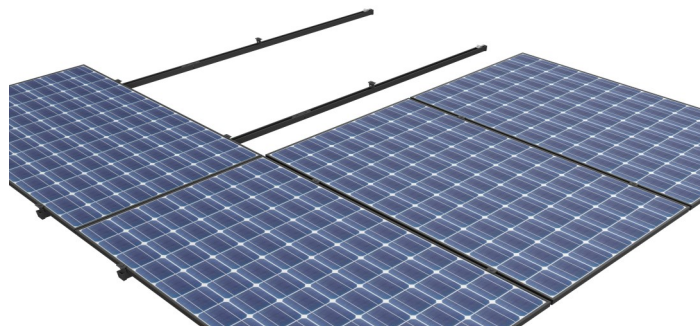

Start the next row of panels. At least a 1/4" gap shall be between each row of PV modules.

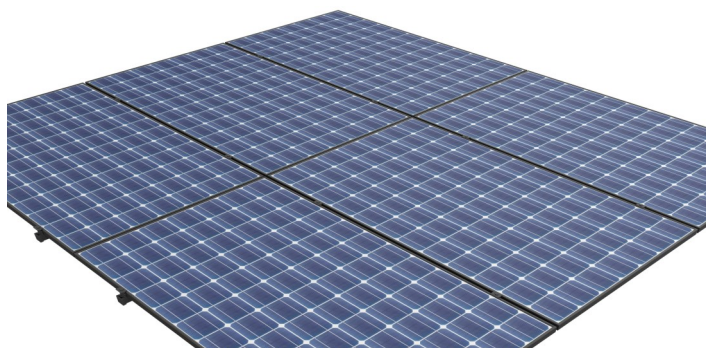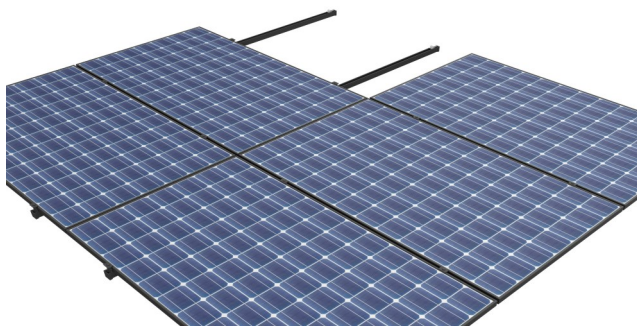



Continue the above steps for every row of modules until array is complete



Installation Process

Intentionally Left Blank

Alternative Ground Lug

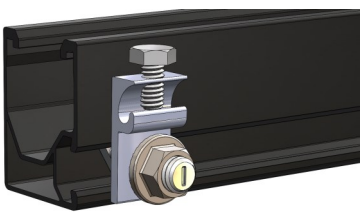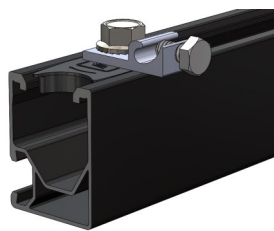

A WEED-LUG-8.0 or equivalent can be installed onto the MLPE Mount in the Rail; tighten MLPE bolt with a 1/2" socket to 135 in-lbs. Install ground wire and tighten lug bolt to 84 in-lbs.

A WEED-LUG-8.0 or equivalent can be installed onto the Dovetail T-bolt; tighten the T-bolt with a 1/2" socket to 250 in-lbs. Install ground wire and tighten lug bolt to 84 in-lbs.




Installation Process


N-S Bonding Jumper Installation *(optional)*



Attach Bonding Jumpers on the underside of PV modules in adjacent rows

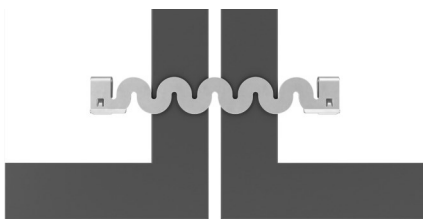

From under the PV module, align the Jumper with the frame lip of each PV module

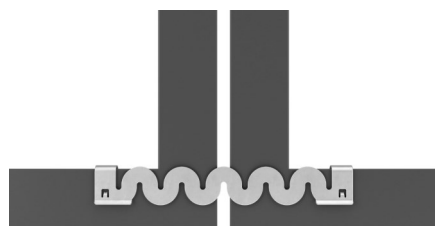

Firmly press each side of the Jumper onto each PV module frame until fully seated

End Cap Installation *(optional)*




Line the tabs on the end cap up with the hollow part of the rail



Press firmly until the End Cap is fully seated against the Rail

Tilt Legs

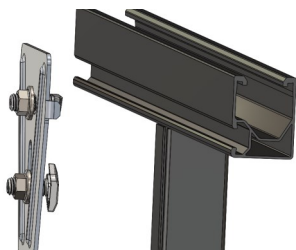

Cut a section of Pegasus Rail to the desired length, then connect to an L-bracket on a roof attachment on one side, and align flush with the Rail on the top side. Then align the Tilt Leg Bracket over the Rails' channels.




Insert a Dovetail T-bolt through each slot of the Tilt Leg Bracket and into each Dovetail channel of the two Rails. Ensure the leg Rail is snug to the horizontal Rail; tighten both Dovetail T-bolts with a 1/2" socket to 250 in-lbs.



Pegasus Rail System - Bond Path to Ground

Ground Lug & N-S Bonding Jumper

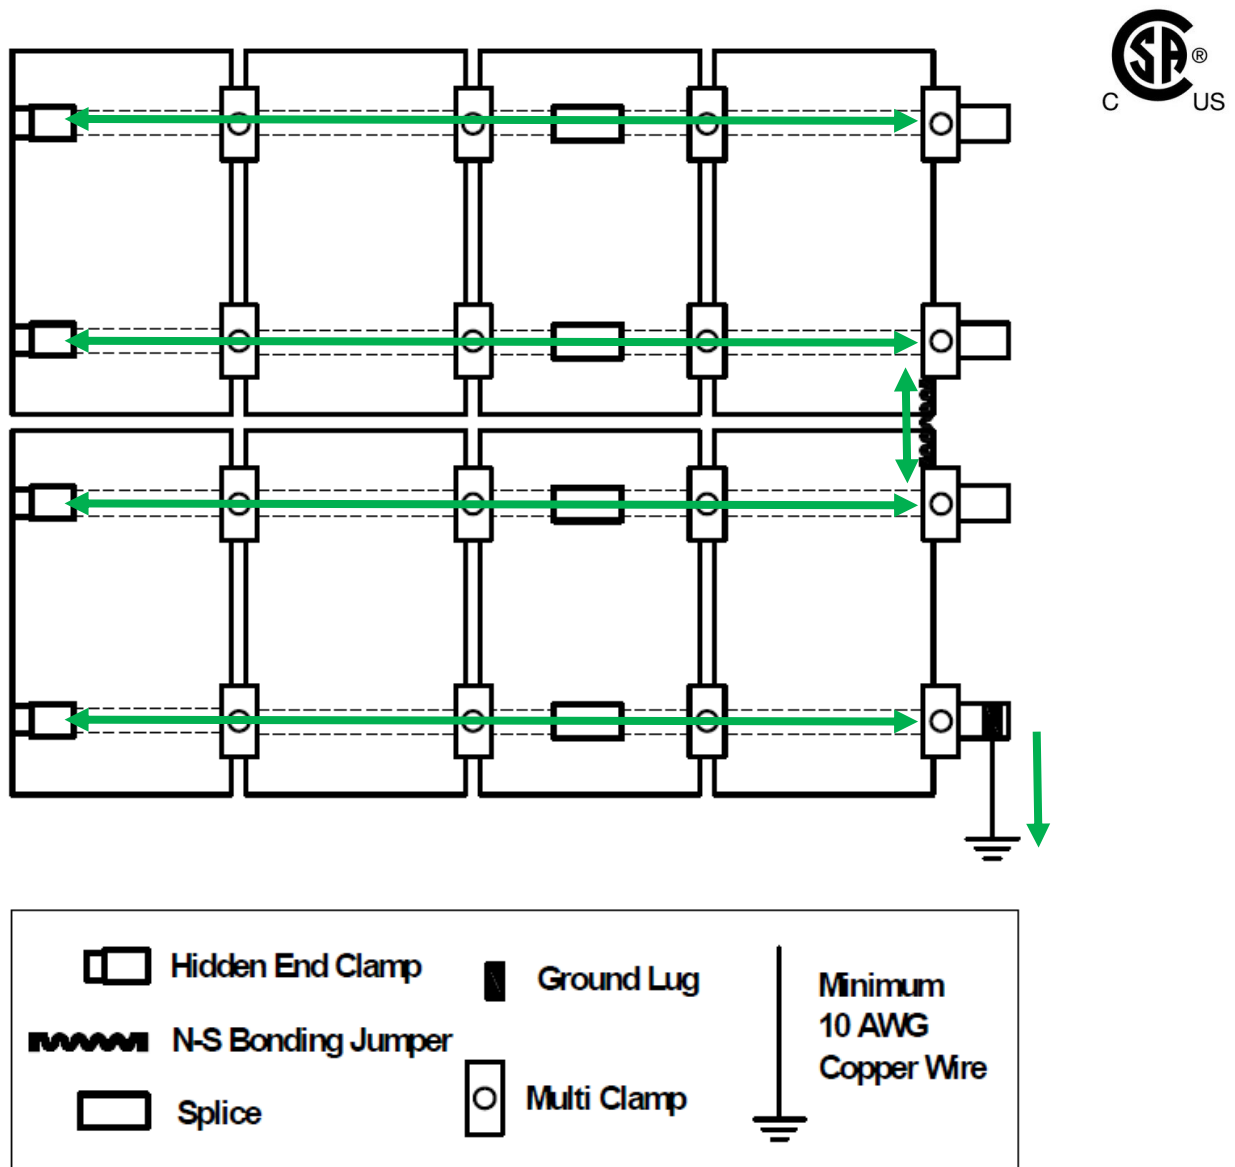

Multi-Clamps bond adjacent PV modules to one another and to the Rail. The Splice provides a bond connection between two Rail sections, including when a 1" thermal gap is utilized. The N-S Bonding Jumper will provide a bonding path between rows of PV modules, so that one Ground Lug per array is necessary for earth ground. If a thermal break is left between two sections or Rail, the Multi-Clamps will provide a bond path across the two Rails through the PV module frame.



The N-S Bonding Jumper may only be used with the Pegasus Rail System, and is not certified for use with any other mounting system.

If the N-S Bonding Jumper needs to be removed during maintenance, a second N-S Bonding Jumper shall first be installed on the opposite end of the row or PV modules, or the array should be disconnected from A/C power.



Pegasus Rail System - Bond Path to Ground

Ground Lug for each PV Module Row

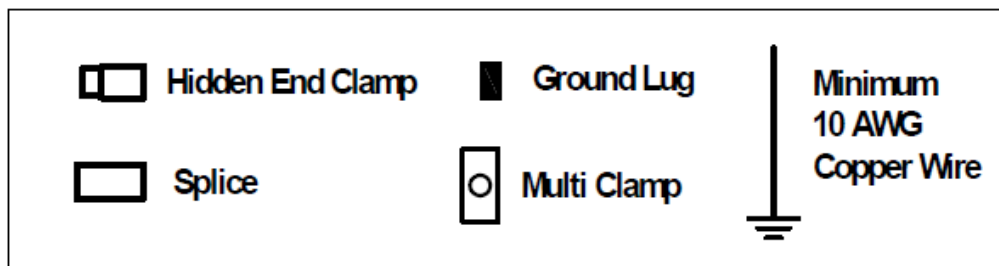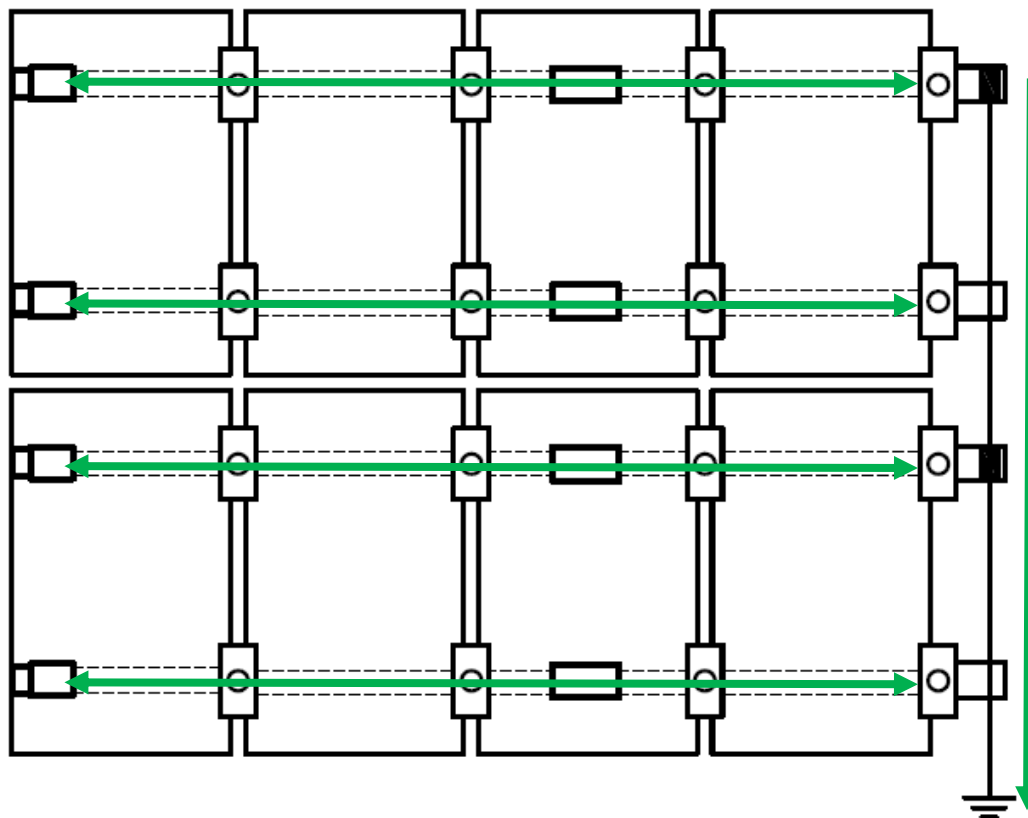

Multi-Clamps bond adjacent PV modules to one another and to the Rail. The Splice provides a bond connection between two Rail sections, including when a 1" thermal gap is utilized. One Ground Lug is required per row of PV Modules, with a final earth ground connection at the terminal end of the ground wire. If a thermal break is left between two sections or Rail, the Multi-Clamps will provide a bond path across the two Rails through the PV module frame.




Intentionally left blank



Pegasus Rail System - Bond Path to Ground

Using Enphase Products

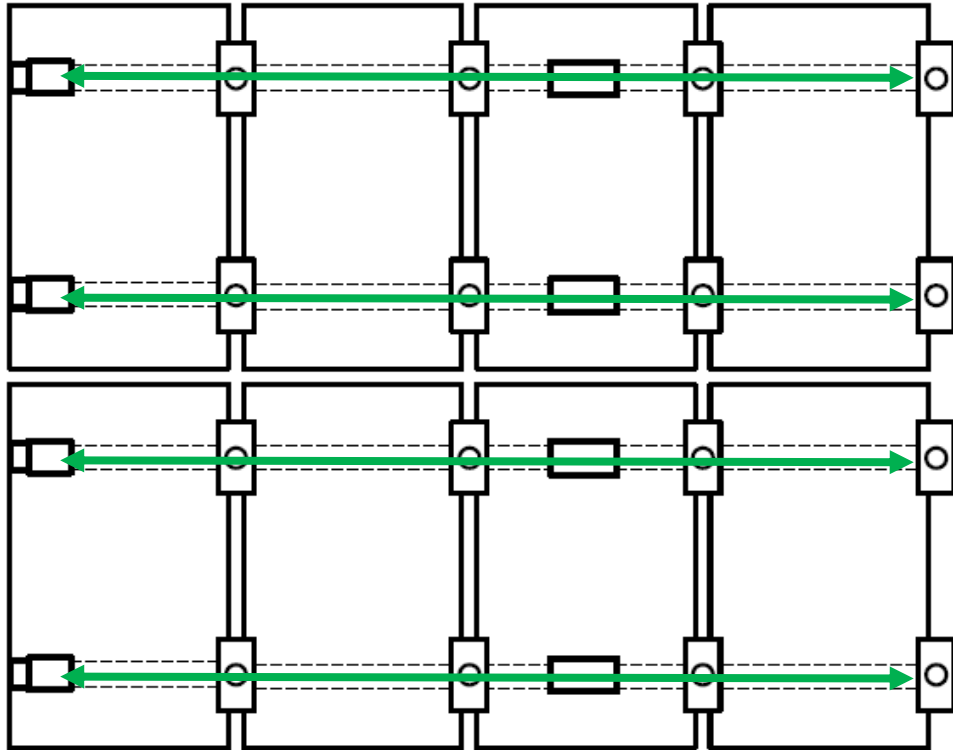

 Hidden End Clamp

 Splice

 Multi Clamp

Multi-Clamps bond adjacent PV modules to one another and to the Rail. The Splice provides a bond connection between two Rail sections, including when a 1" thermal gap is utilized. The MLPE Mount creates a bond connection to the MLPE. When using Enphase products, Ground Lug, N-S Bonding Jumpers, or other equipment ground conductors (EGC) are not required, and the use of the Enphase products satisfies the UL2703 bonding and grounding requirements.

Compatible Enphase products:

- Microinverters M250-72, M250-60, M215-60, C250-72; with Engage cables ETXX-240, ETXX-208, ETXX-277



Appendix A - Compatible PV Modules

Pegasus Rail System may be used to ground a PV module complying with UL 2703 only when the specific module has been evaluated for grounding and/or mounting in compliance with this installation manual. Unless otherwise specified, "xxx" refers to the power rating of the PV module. Both black & silver frames are included in the UL2703 listing.

Manufacturer	Model
Auxin	AXN6M612Txxx
Axitec	AC-xxxM/156-60S; AC-xxxM/60S; AC-xxxMH/120S; AC-xxxMH/144S
Boviet	BVM6610M-xxx; BVM6610P-xxx
Canadian Solar	CS1H-xxxMS; CS1K-xxxMS; CS3K-xxxMS; CS3U-xxxMS; CS6K-xxxM; CS6K-xxxMS; CS6k-xxxP; CS6U-xxxM; CS6U-xxxP; CS6X-xxxM; CS6X-xxxP;
CertainTeed	CTxxxHC11-04; CTxxxM10-02; CTxxxM11-02; CTxxxM11-03
Chint Solar	CHSM6612M-xxx
Hansol	HSxxxTD-AN3
Hanwha Q cells	Q.Peak 265; Q.PEAK BLK-G3.1 xxx; Q.PEAK BLK-G4.1 xxx; Q.PEAK DUO BLK-G5 xxx; Q.PEAK DUO BLK-G5/SC xxx; Q.PEAK DUO BLK-G6+ xxx; Q.PEAK DUO G6+ xxx AC ENP IQ7+; Q.PEAK DUO BLK G9+ xxx; Q.PEAK DUO L-G5.2 xxx; Q.PEAK DUO L-G5.3 xxx; Q.PEAK Duo-G5 xxx; Q.PEAK DUO-G5/SC xxx; Q.PEAK DUO-G7 xxx; Q.PEAK G4.1 xxx; Q.PEAK G4.1/ Max xxx; Q.PEAK G4.1/SC xxx; Q.PEAK G4.1/TAA xxx; Q.PEAK L-G4.2 xxx; Q.PLUS BFR G4.1 xxx; Q.PLUS BFR-G4.1/TAA xxx; Q.PLUS L-G4.1 xxx; Q.PLUS L-G4.2 xxx; Q.PLUS L-G4.2/TAA xxx; Q.PRO BFR-G4.1 xxx; Q.PEAK DUO L-G8.2 xxx; Q.PEAK DUO BLK-G8 xxx; Q.PEAK DUO BLK-G8+ xxx;
Hyundai	HiD-SxxxRG(BK); HiS-MxxxRG; HiS-SxxxKI; HiS-SxxxRG; HiS-SxxxRG(BK); HiS-SxxxRI; HiS-SxxxTI; HIA-SxxxHI
JA Solar	JAM72S01-xxx/PR; JAP72S01-xxx/SC
Jinko	JKMxxxM-60; JKMxxxM-60B; JKMxxxM-60BL; JKMxxxM-60HBL; JKMxxxM-60HL; JKMxxxM-60L; JKMxxxM-60-V; JKMxxxM-72; JKMxxxM-72HL-V; JKMxxxM-72H-V; JKMxxxM-72-V; JKMxxxP-60; JKMxxxPP-60
LG	LGN1K-G4; LGS1C-A5; LGxxxA1C-A5; LGxxxE1C-A5; LGxxxE1K-A5; LGxxxN1C-A3; LGxxxN1C-A5; LGxxxN1C-B3; LGxxxN1C-G3; LGxxxN1C-G4; LGxxxN1C-V5; LGxxxN1C-Z4; LGxxxN1K-A5; LGxxxN1K-G4; LGxxxN1K-V5; LGxxxN1K-Z4; LGxxxN2T-A5; LGxxxN2W-A5; LGxxxN2W-G4; LGxxxN2W-V5; LGxxxN2W-L5; LGxxxQ1C-A5; LGxxxQ1C-V5; LGxxxQ1K-A5; LGxxxQ1K-V5; LGxxxS1C-A5; LGxxxS1C-G4; LGxxxS2W-A5; LGxxxN1K-L5; LGxxxNIC-N5
Longi	LR6-60BP-xxx; LR6-60HPB-xxx; LR6-60HPH-xxx; LR6-60PB-xxx; LR6-60PE-xxx; LR6-60-xxx; LR4-60HPH-xxxM; LR4-HPB-xxxM; LR4-72HPH-xxxM; LR4-72HBD-xxxM
Mission Solar	MSE60Axxx; MSExxxSB1A; MSExxxSO6J; MSExxxSQ5K; MSExxxSQ5T; MSExxxSQ8K; MSExxxSQ8T; MSExxxSQ9S; MSExxxSX6W; MSExxxSX5T MSExxxSX5K
Panasonic	VBHNxxxKA01; VBHNxxxKA03; VBHNxxxSA16; VBHNxxxSA16B; VBHNxxxSA17; VBHNxxxSA17E; EVPVxxx; EVPVxxxK
REC	RECxxxNP; RECxxxNP Black; RECxxxPE; RECxxxPE 72; RECxxxPE(BLK); RECxxxTP; RECxxxTP BLK; RECxxxTP2; RECxxxTP2 BLK; RECxxxTP2 BLK Q2; RECxxxTP2 BLK2; RECxxxTP2M; RECxxxTP2S 72; RECxxxAA
S-Energy	SNxxxM-10; SNxxxM-10(B); SNxxxM-10T; SC20-60MBE-xxxM
Silfab	SILxxxBL; SILxxxNL; SLAxxxM; SLAxxxM; SLGxxxM; SSAxxxM; SIL-xxxNX
Solaria	PowerXT-xxxR-AC; PowerXT-xxxR-BD; PowerXT-xxxR-BX; PowerXT-xxxR-PD; PowerXT-xxxR-PX
SunPower	SPR-Axxx-G-AC; SPR-E19-xxx; SPR-E19-xxx-D-AC; SPR-E20-xxx; SPR-E20-xxx-C-AC; SPR-E20-xxx-COM; SPR-E20-xxx-D-AC; SPR-E20-xxx-E-AC; SPR-X20-xxx-D-AC; SPR-X20-xxx-E-AC; SPR-X21-xxx; SPR-X21-xxx-BLK; SPR-X21-xxx-BLK-C-AC; SPR-X21-xxx-BLK-D-AC; SPR-X21-xxx-BLK-E-AC; SPR-X21-xxx-C-AC; SPR-X21-xxx-D-AC; SPR-X22-xxx; SPR-X22-xxx-C-AC; SPR-X22-xxx-COM; SPR-X22-xxx-D-AC; SPR-X22-xxx-D-AC; SPR-X22-xxx-E-AC; SPR-xxxE-WHT-D; SPR-xxxNE-WHT-D
Tesla	SC31582; SCxxx; SCxxxB1; SCxxxB2
Trina	TSM-xxxDD05A; TSM-xxxDD05A(II); TSM-xxxDD05A.05(II); TSM-xxxDD05A.08(II); TSM-xxxDD05A.18(II); TSM-xxxDD05H.05(II); TSM-xxxDD05H.08(II); TSM-xxxPA05.18; TSM-xxxPD05.05; TSM-xxxPD05.18; TSM-xxxPD14; TSM-xxxDD06M.05(II); TSM-DD06H.08(II); TSM-DD06H.05(II)
United Ren. Energy	D6MxxxH3A
Winaico	WSP-xxxM6
Yingli	YLxxxD-30b; YLxxxP-29b



Warranty and External Links

PE Certifications and Span Tables

www.pegasussolar.com/spans

Warranty

www.pegasussolar.com/warranty

Comp Conduit Mounts and other Accessories

www.pegasussolar.com/accessories

